
OPERATOR'S MANUAL

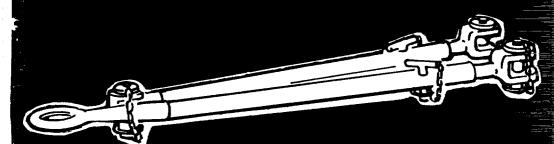

TOWBAR

OCT 1972 MOTOR VEHICLE

TO AVOID DAMAGE OR INJURY

- NEVER ATTEMPT TO HOOK UP THE TOWBAR ALONE, (USE TWO PEOPLE).
- ◆ NEVER USE THE TOWBAR WITHOUT THE CLEVISES.
- TENSION ADJUSTING NUTS MUST BE TIGHT, USE A WRENCH.

TOWING IS SERIOUS BUSINESS

TO AVOID DAMAGE OR INJURY

THE M715 OR M725, 1-1/4 TON VEHICLES CANNOT BE TOWED USING THIS TOWBAR. THESE VEHICLES MUST BE LIFT TOWED BY A WRECKER IN ACCORDANCE WITH FM 20-22 (JULY 1970), PARAGRAPH 90 b. "VEHICLE RECOVERY OPERATIONS".

TO AVOID DAMAGE OR INJURY

→ WHEELED VEHICLES UP TO AND INCLUDING 14,000 LBS
GROSS WEIGHT CAN BE TOWED WITH ALL WHEELS ON
THE GROUND WITH THE TOWBAR IN ANY POSITION
WHEN CONNECTED TO THE BUMPER SHACKLE BRACKETS.
IT IS DESIRABLE TO KEEP THE TOWBAR EXTENSION AS
CLOSE TO THE RETRACTED POSITION AS POSSIBLE.

TO AVOID DAMAGE OR INJURY

WHEELED VEHICLES UP TO AND INCLUDING 42,000 LBS GROSS WEIGHT CAN BE TOWED WITH ALL WHEELS ON THE GROUND WITH THE TOWBAR IN THE <u>RETRACTED</u> POSITION WHEN CONNECTED TO THE BUMPER SHACKLE BRACKETS.

THIS ALLOWS TOWING OF ALL WHEELED VEHICLES UP TO AND INCLUDING EMPTY 5 TON TRUCKS. DO NOT EXCEED A SPEED OF 20 MPH OVER PRIMARY AND SECONDARY ROADS. THE 42,000 POUND GROSS WEIGHT LIMIT CAN BE APPLIED TO ANY LOADED VEHICLE THAT DOES NOT EXCEED 42,000 POUNDS GROSS WEIGHT.

JUST THE FACTS ON:


THE MOTOR VEHICLE




(FSN 4910-735-6056)

TOWING CAPACITY
MAXIMUM LEG EXTENSION ————————————————————————————————————
MINIMUM LEG EXTENSION ———— 53 INCHES
LEG SPREAD
WEIGHT → 165 LBS
VOLUME → 3.3 CUBIC FEET

EVERY TOWBAR COMES FULLY

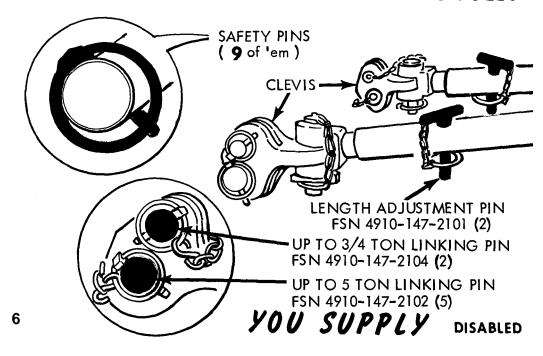

EQUIPPED WITH THE FOLLOWING:

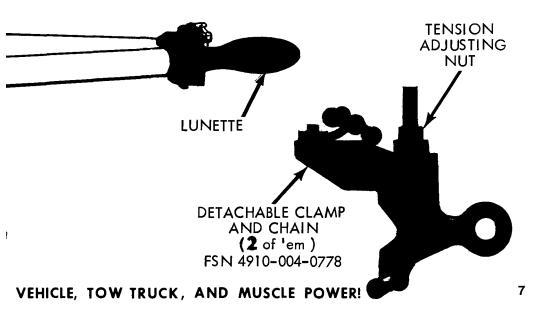


OPERATING


YOUR TOWBAR

3 WAYS


 By coupling onto bumper shackle brackets.

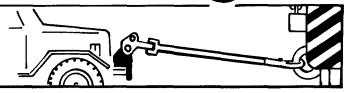

 By attaching clamps and chains of towbar to front axle for lift tow operations.

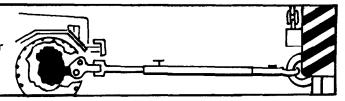

3) By using clamps and chains on bumper.

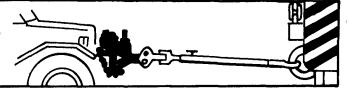

BRACKET TOWING

If your disabled vehicle has bumper shackle brackets (and steering, transmission, and front tires are O. K.) tow by coupling into brackets.




HERE'S HOW:


FIRST- Remembering that two are better than one, get a buddy to steer the disabled vehicle. Two drivers make the towing job QUICKER, EASIER, and SAFER!

SECOND- Select the linking pins you'll want to use, then couple onto bumper shackle brackets.



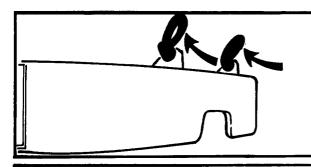



Remove towing pins and lifting <u>shackles</u> from brackets and set them aside. They won't be used.

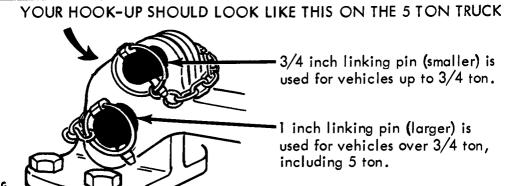

TWO RULES TO REMEMBER HERE:


- The linking pin you're using will ALWAYS be on the BOTTOM.
- 2) The TOP of the "T" of length adjustment pin is ALWAYS on TOP.

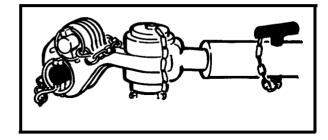

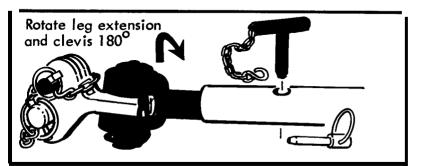



After clevises are connected to bumper shackle brackets attach lunette to the tow truck pintle.

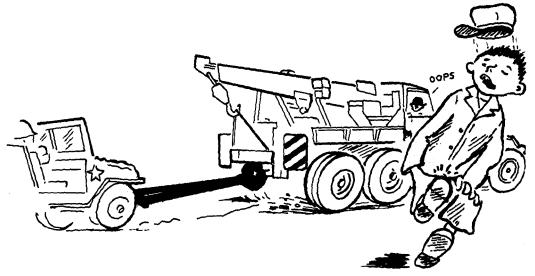


THE TOWBAR IS ALWAYS ATTACHED TO TOW TRUCK LAST!!


BACK the truck CAREFULLY and watch your toes!




Be certain you have the proper linking pins in the clevis holes and always be sure your **9** safety pins are properly secured. (They snap shut automatically.)

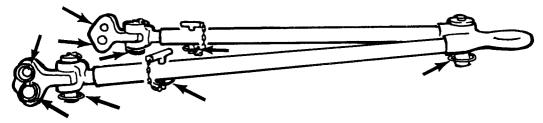


NOTE: PLIERS MAY BE NEEDED TO REMOVE SAFETY PINS.

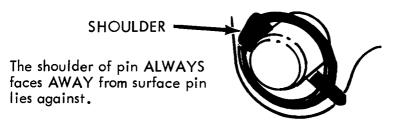


IT ONLY goes in ONE way!! Use only the equipment -- including safety pins-- that comes with your TOWBAR. Don't interchange linking pins, safety pins, etc., from your vehicles with those of your TOWBAR.

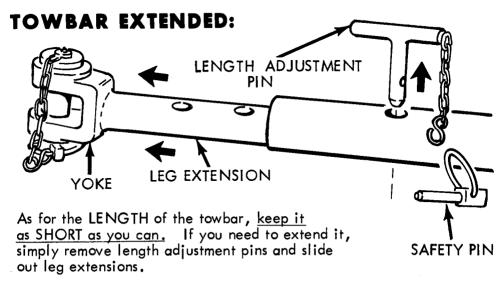


Whatever you do, don't use your TOWBAR without the CLEVISES!

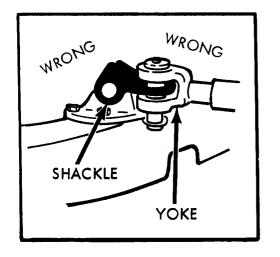

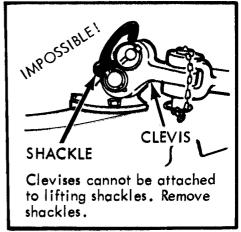


Hook it up right, or the results could be DISASTROUS!!

THERE IS A LIST OF IMPORTANT WARNINGS AT THE FRONT OF THIS MANUAL.

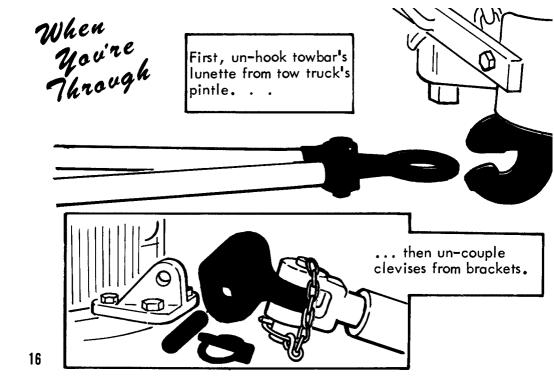

Put all pins, etc., back in place before storing. You'll use less space if you slide the leg extensions completely in.

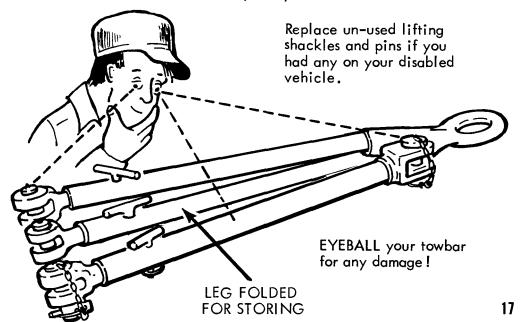



LIFT-TOW OPERATIONS

If your disabled vehicle has NO towing brackets on its front bumper, or power steering, transmission, or front tires are someway inoperable, lift-tow using a wrecker (see FM 20-22, Para. 90 b.).

HERE'S WHAT YOU'LL DO IF TOWBAR IS USED FOR STABILIZATION:

LENGTH ADJUSTMENT PIN Remove length adjustment pins from the towbar's legs... SAFETY PIN

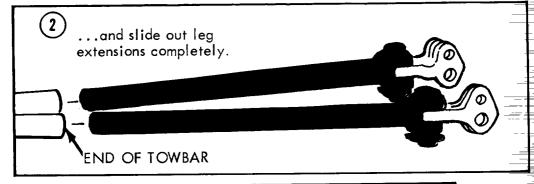

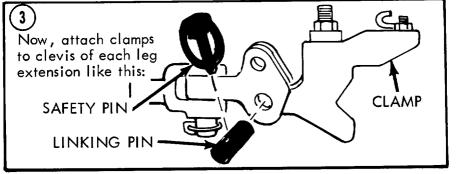

MORE


13

When lift-towing, the LARGER linking pin is ALWAYS on the BOTTOM.


Rotate clevis 180° to change pin.

If everything looks O.K., you're ready to attach clamps and chains to axle.

tension adjusting nut on TOP.

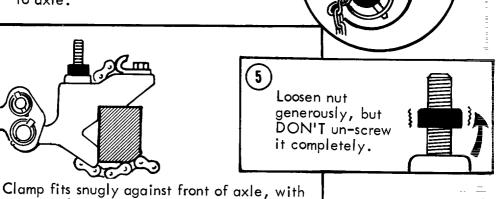


Now, pull chain around axle and up through clamp.

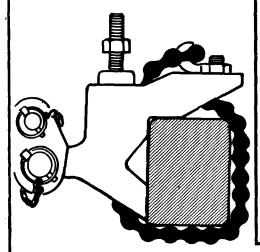

Pull it TIGHT and place it on hook.


Even you strongmen will now TIGHTEN the tension adjusting nuts with a WRENCH.

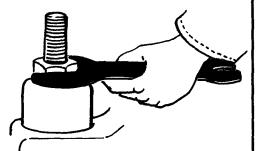


Make sure clamp and chain are firmly secured. A loose nut may allow them to work loose...

...THEN

When both clamps are secured, slide leg extensions back into legs as far as is necessary, and replace length adjustment pins, with top of "T" on TOP!

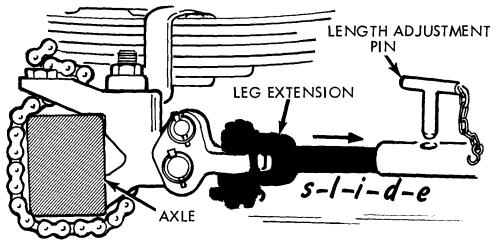


Keep LENGTH of TOWBAR as SHORT as you can.

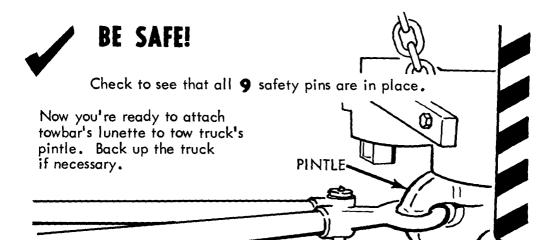


NOTE: When towing a vehicle by the axle, use a WINCH and HOOK along with the towbar, in order to raise the front wheels of the towed vehicle.

MORE

Always completely attach towbar FIRST when using a winch with it.

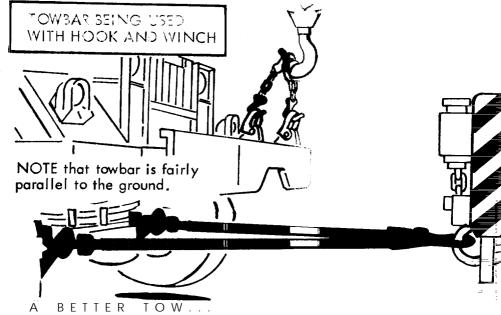


A set-up using both the TOWBAR and the WINCH offers **24** better maneuverability.

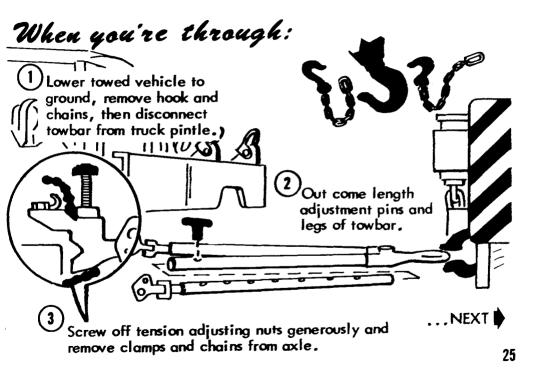



Now slide leg extensions back in place and replace length adjustment pins.

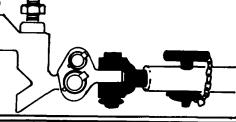

5)

Finally, (whew!) remove clamps from towbar.




Make sure all pieces of towbar are back in place before storing!

TOWING can be FUN!!

2 BUMPER TOWING

If there are no towing shackle brackets on the disabled vehicle tow from the front bumper.

Follow the same procedures and precautions described in section 2 (lift-tow operations), EXCEPT you'll attach clamps and chains to bumper . . .

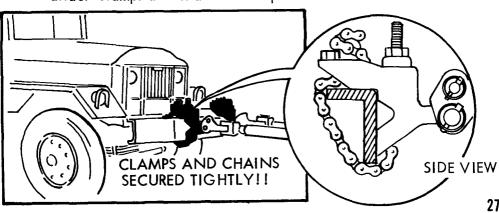

LUBRICATION 8

Maybe a rub-down periodically to prevent and, a dab or two of general purpose oil around your various pins will make them easier to work with. Common sense is the guide here.

A FINAL WORD Safety!

A sharply turned corner or a U-TURN can the legs of your TOWBAR! Take these kinds of turns SLOWLY! The vehicle you save...

ANY OTHER TOWING RESTRICTIONS ARE IN YOUR VEHICLES' MANUALS.

... ANY QUESTIONS?? HAVE A SUGGESTION MAYBE?

WE AIM TO PLEASE.

Write to us.

COMMANDING GENERAL
U.S. ARMY WEAPONS COMMAND
ATTN: AMSWE-MAS
ROCK ISLAND, ILLINOIS 61201



TM 9-4910-496-10

This TM supersedes TM 9-4910-496-10, December 1971, and DA Messages WECOM 262016Z, Jul 72 (U) and 241721Z, Oct 72 (U); Subject: Interim Change to TM 9-4910-496-10 for Towbar, Motor Vehicle, FSN 4910-735-6056.

By Order of the Secretary of the Army:

CREIGHTON W. ABRAMS
General, United States Army
Chief of Staff

Official:

VERNE L. BOWERS

Major General, United States Army
The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12–21 (qty rqr block No. 132) Requirements for FSC Group 4910–IL.